


Product fiche

REGULATION (EU) No 1059/2010

 * * * Asterisk(s) means variant model and can be varied (0-9) or (A-Z).




Supplier		SAMSUNG			
Model name		DW60H9970U*	DW60H9950U*	DW60H9970F*	DW60H9950F*
Rated Capacity (place setting)		14	14	14	14
Energy efficiency class		A++	A++	A++	A++
Eco label		No	No	No	No
Annual energy consumption, (AE _c) (kWh/year) ¹⁾		266	266	266	266
Standard cycle energy consumption, (E _j) (Kwh)		0.936	0.936	0.936	0.936
Power consumption off mode, P _o (W)		0.45	0.45	0.45	0.45
Power consumption left-on mode, P _i (W)		5	5	5	5
Annual water consumption (AW _c), (L) ²⁾		2996	2996	2996	2996
Drying efficiency class		A	A	A	A
Standard programme ³⁾		Eco	Eco	Eco	Eco
Programme time for the standard cycle		190	190	190	190
Duration of the left-on mode, (T _i) (min)		10	10	10	10
Airborne acoustical noise emissions (dBA re 1pW)		41	44	41	44
Installation	Built-under	Yes	Yes	-	-
	Free standing	-	-	Yes	Yes

- 1) Based on 280 standard cleaning cycles using cold water fill and the consumption of the low power modes. Actual energy consumption will depend on how the appliance is used.
- 2) Based on 280 standard cleaning cycles. Actual water consumption will depend on how the appliance is used.
- 3) 'Standard programme' is the standard cleaning cycle to which the information in the label and the fiche relates, that this programme is suitable to clean normally soiled tableware, and that it is the most efficient programme in terms of combined energy and water consumption.

Programme chart

PROGRAMME CHART

Soil level	Auto	ECO	Intensive	Delicate	Quick
Amount of food remains	Very light to Heavy	Normal	Heavy	Light	Light
Program sequence	Prewash ▶ Mainwash ▶ Rinse ▶ Hot rinse ▶ Dry ▶ End	Prewash ▶ Mainwash ▶ Rinse ▶ Hot rinse ▶ Dry ▶ End	Prewash ▶ Mainwash ▶ Rinse ▶ Hot rinse ▶ Dry ▶ End	Prewash ▶ Mainwash ▶ Rinse ▶ Hot rinse ▶ Dry ▶ End	Mainwash ▶ Rinse ▶ Hot rinse ▶ End
Water consumption (L)	11.0-21.0	10.7	25.9	10.9	11.2
Energy consumption (kWh)	1.0 ~ 1.5	0.94	1.65	0.84	0.9
Program Time (min)	128 ~ 184	190	199	113	38

-  The wash time varies depending on the options you add, and on the pressure and temperature of the supplied water.
-  Quick Cycle : This cycle doesn't work AUTO DOOR. (without DRY course)
-  The power consumption depends on the water temperature and/or load.
When the Rinse Aid is empty, time and temperature can increase a little.
The water consumption and wash time depending on the steps or options you add, and on the pressure and temperature of the supplied water.