



Entrada de tecla rápida	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
Dicir contraseñas	✗	✗	✗	✓	✓	✓	✗	✓	✓	✓
Etiqueta de voz	✓	✓	✓	✓	✓	✓	✓	✓	✓	✗
Fuente y zoom de pantalla	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
Fuentes de contraste alto	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
Teclado de contraste alto	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
Mostrar formas de botones	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
Lupa	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
Ampliación / Gestos de ampliación	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
Puntero de ratón / Panel táctil grande	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
Escala de grises	✓	✓	✓	✓	✓	✓	✓	✓	✓	✗
Colores negativos	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
Ajuste de color	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
Filtros de color	✓	✗	✓	✗	✗	✗	✗	✗	✗	✗

## Audición

Detectores de sonido	✓	✓	✓	✓	✗	✗	✗	✗	✗	✗
Notificación con flash / Notificación de parpadeo	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
Silenciar todos los sonidos	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
Subtítulos de Samsung (CC)	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
Subtítulos de Google (CC)	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
Balance de sonido izq/dcho	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
Audio mono	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓

## Destreza e interacción

Acción personalizable / Botón universal	✓	✓	✓	✓	✓	✓	✓	✗	✗	✗
Menú de asistencia	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
Encendido fácil	✓	✓	✓	✓	✗	✗	✗	✗	✗	✗
Pulsación larga	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
Clic cuando para el puntero	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
Control de interacción	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓

## Más ajustes

Texto para pronunciar	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
Bloqueo por direcciones	✓	✓	✓	✓	✓	✓	✓	✓	✓	✗
Acceso directo	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
Acceso directo de Accesibilidad	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
Recordar notificación	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
Respuesta y finalización de llamadas	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
Modo Un toque	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
Copia seguridad ajustes de Accesibilidad	✓	✓	✓	✓	✓	✓	✓	✗	✗	✗

Voz										
Bixby	✓	✓	✓		✓					
S Voice				✓	✓	✓	✓			
TalkBack								✓	✓	✓